 


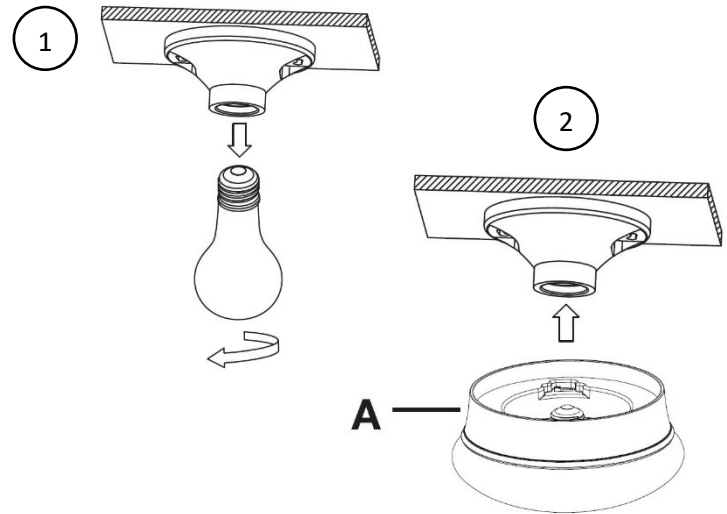

Instructions for Installing to a Keyless Lamp Holder

 
NOTE: Wire strippers, safety goggles, ladder, gloves, flathead and Phillips screwdrivers, electrical tape and wire cutters or similar tools are required to install the 7" LED Low-Profile Luminaire with Motion Sensor.

1. Prepare lamp holder for installation by removing existing bulb.
2. Attach the fixture to the keyless lamp holder by screwing the threaded base on the fixture body (A) clockwise into the keyless lamp holder (not included).
3. Hardware included:
 - Wire connector, qty. 3
 - Electrical box screw (5/8 in.), qty. 2
 - Mounting screw (2 in.), qty. 2
 - Mounting bracket, qty. 1
 - Socket, qty. 1
 - Ground screw, qty. 1



Instructions for Installing to an Electrical Outlet Box



1. Turn the diffuser (B) counterclockwise and remove it from the fixture body (A).
2. Attach the electrical box screws (BB) directly to the electrical outlet box.
3. Wire the socket according to the local electrical code:
 - Connect the white wire from the SpeedMount™ socket (AA) to the white wire from the electrical outlet box.
 - Connect the black wire from the SpeedMount™ socket (AA) to the black wire from the electrical outlet box.
 - Wrap the ground wire from the electrical outlet box around the ground screw on the SpeedMount™ socket (AA).
 - Position the wires back inside the electrical outlet box.

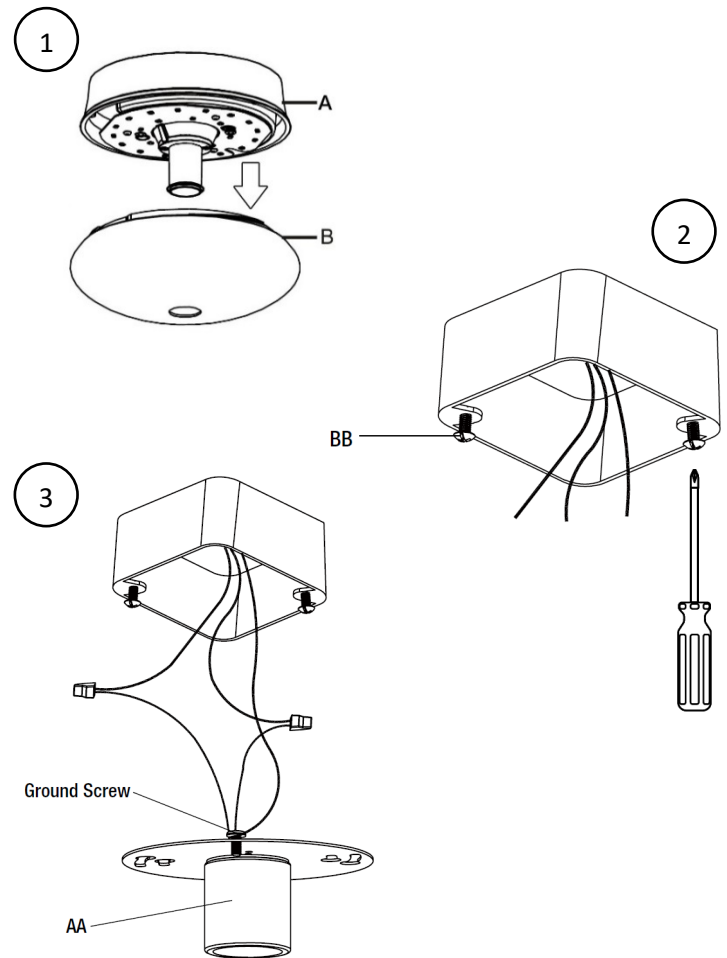




Instructions for Installing to an Electrical Outlet Box continued

  4. Attach the SpeedMount™ socket to the electrical outlet box:
 - Select the mounting holes on the SpeedMount™ socket (AA) according to the size of the electrical outlet box.
 - Position the SpeedMount™ socket (AA) over the electrical outlet box, allowing the heads of the electrical box screws (BB) to come through the large ends of the keyholes.
 - Turn the SpeedMount™ socket (AA) clockwise until the heads of the electrical box screws (BB) slide into the narrow ends of the keyholes.
 - Tighten the electrical box screws (BB) to secure the SpeedMount™ socket (AA) to the electrical outlet box.
5. Attach the fixture body to the SpeedMount™ socket:
 - Screw the threaded base on the fixture body (A) clockwise into the SpeedMount™ socket (AA).
 - Restore power at the electrical panel.
 - Turn on the light switch to activate the fixture.
6. Attach the diffuser to the fixture body:
 - Align the slots on the diffuser (B) with the divots on the fixture body (A).
 - Carefully turn the diffuser body (B) clockwise until it locks into place. The diffuser (B) only turns about 1/8 of a turn. Do NOT over tighten.

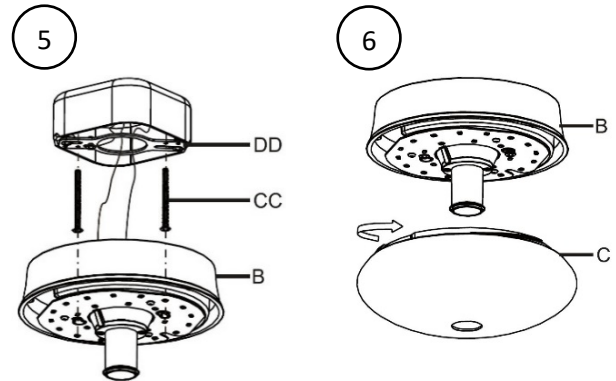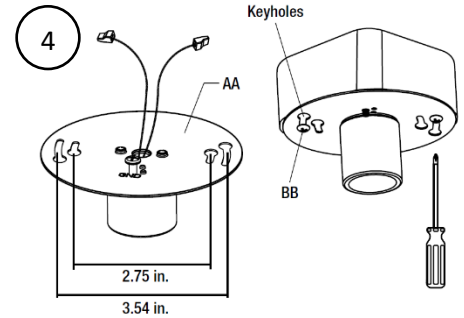


Instructions for Adjusting the Motion Sensor

 1. Slide the switch to the desired position to select the hold-time:
 - Position 1, switch positioned to the left, 2 min.
 - Position 2, switch centered, 5 min.
 - Position 3, switch positioned to the right, 15 min.
2. Move the toggle switch on the inside of the fixture body to make your selection before attaching the fixture body to the keyless lamp holder or electrical outlet box.

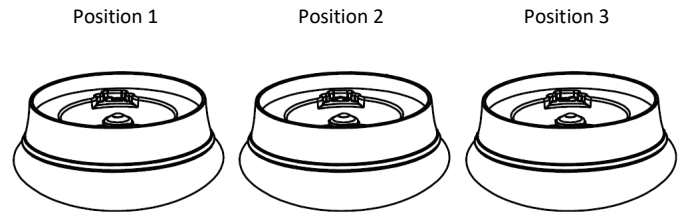

 NOTE: The motion sensor detection area varies with the ceiling height on which the fixture is installed.

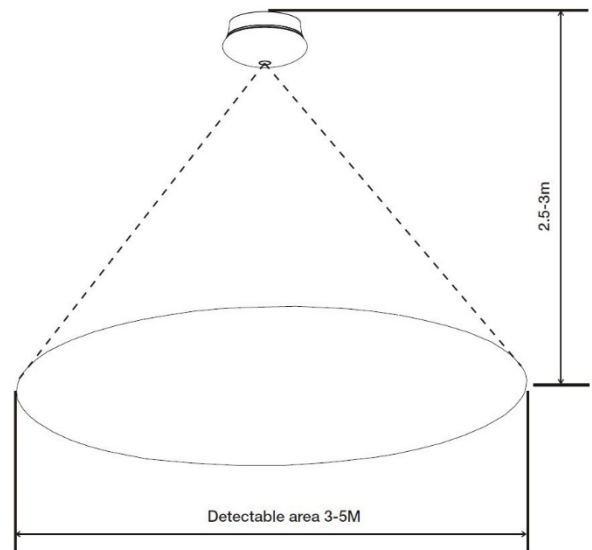

Allied Moulded Products, Inc.
222 North Union Street • Bryan, Oh 43506
Phone: 1-800-722-2679 • Fax: 1-800-237-7269
www.alliedmoulded.com