


Installation Instructions

These instructions apply to Allied Moulded Products part numbers FB-3CVR, FB-3NCVR


The cover replacement kits are to be used with Allied Moulded part numbers FB-3, FB-3N

NOTE: See installation instructions for FB-3 / FB-3N for the installation procedure for the floor box assemblies. These instructions apply only to cover replacements.

1. Remove the old cover from the installed floor box assembly by removing the three cover retaining screws
2. Remove the old gasket from the flange of the floor box
3. Position the new gasket on back of the cover, aligning the three holes on the gasket to line up with the screw holes on the cover.

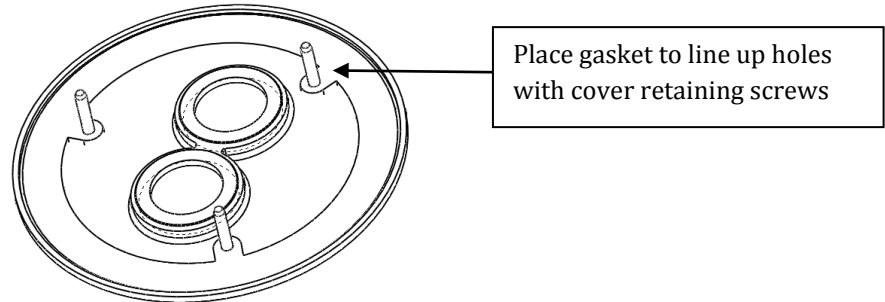

4. Install new cover with the #6 cover retaining screws. Align the hole plugs to the installed receptacle.

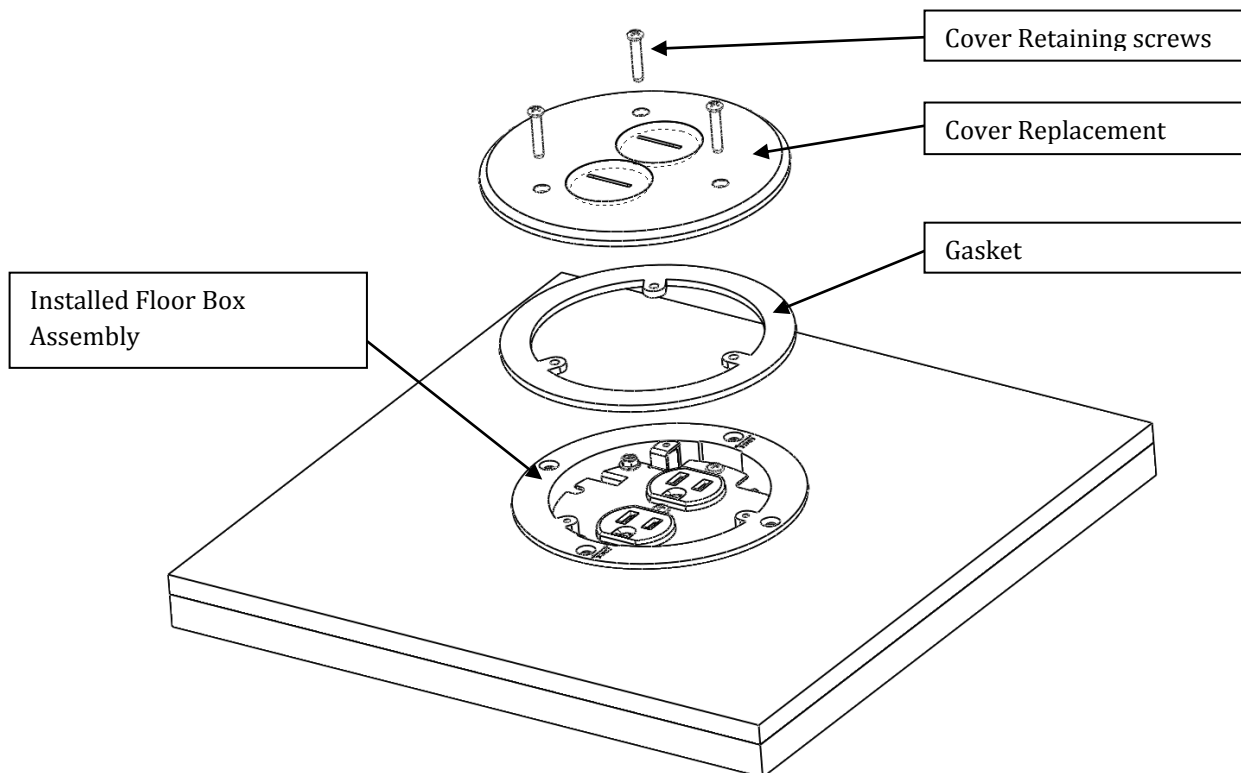


Installation Instructions

These instructions apply to Allied Moulded Products part numbers FB-1CVR, FB-1NCVR, FB-2CVR, FB-2NCVR

The cover replacement kits are to be used with Allied Moulded part numbers FB-1, FB-1N, FB-2, FB-2N

NOTE: See installation instructions for FB-1 / FB-2 for the installation procedure for the floor box assemblies. These instructions apply only to cover replacements.

1. Remove the old cover from the installed floor box assembly by removing the two cover retaining screws
2. Remove the old gasket from the flange of the floor box
3. Position the new gasket on back of the cover, aligning the two holes on the gasket to line up with the screw holes on the cover.

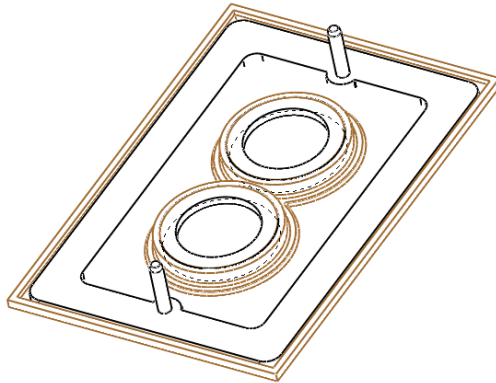

4. Install new cover with the #6 cover retaining screws.

